




## Quick Start

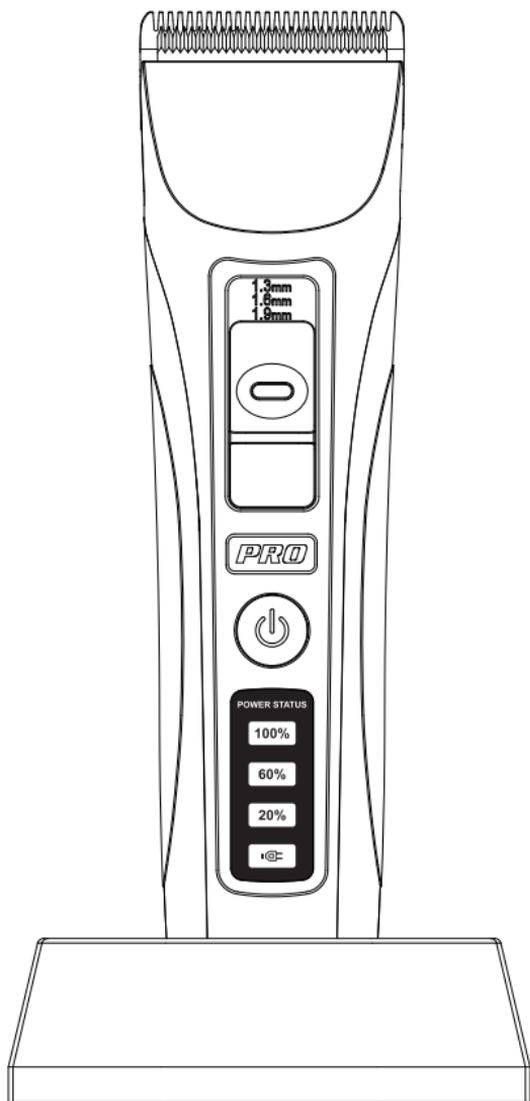


**Pet Grooming Clipper:930**


## User Manual

Before using please read the manual carefully and keep it properly for reference

## NAME OF PARTS

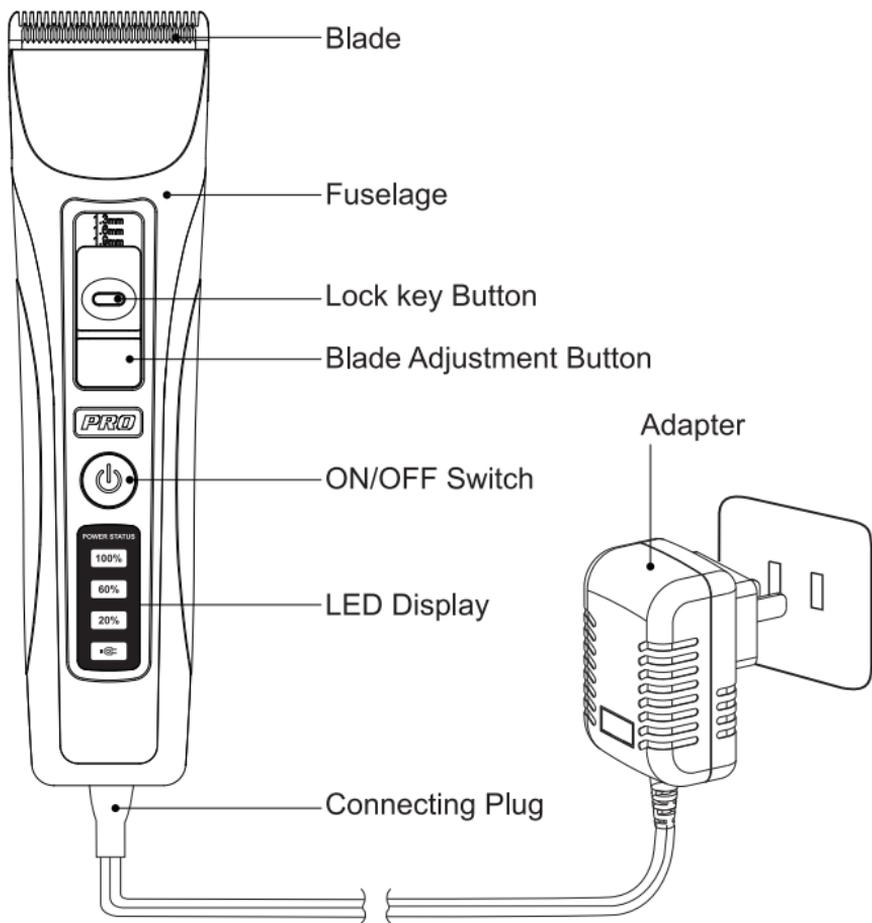

## ACCESSORIES

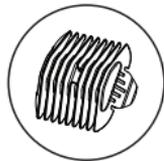

3/6mm Comb



9/12mm Comb



Cleaning Brush



Oil Bottle



Charge Stand

## PRODUCT SPECIFICATION

Adapter: Input AC 100V~240V 50/60Hz

Output DC 5V 1000mA

Battery Type: Rechargeable Li-ion battery (2200mAh)

Charging Time: 3 Hours


Using Time: 300 minutes

## CHARGING METHOD

1. Put the connecting plug into the slot of charge stand.
2. Put the adapter plug into the socket
3. Place the clipper into charge stand after confirming power off.
4. The charge prompt icon lights up while charging.

\*The clipper can be directly connected to the adapter to charge.


\*The clipper can be directly connected to the adapter to use when no power.

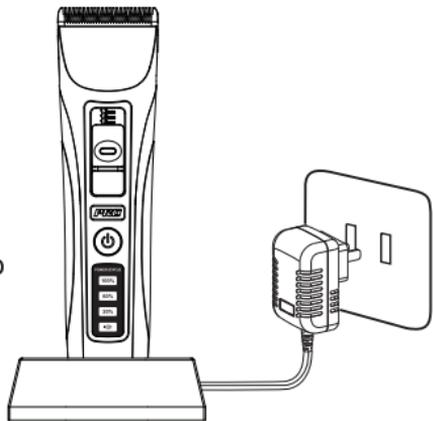

## CHARGING INSTRUCTION

1. The best charging temperature: 5°C~40°C.
2. The battery will reach its best condition after being fully charged for 3~4 times.
3. It's normal phenomenon for the clipper to give out some heat while using and charging.
4. Please use the original adapter to charge.

## LED FUNCTION DESCRIPTION

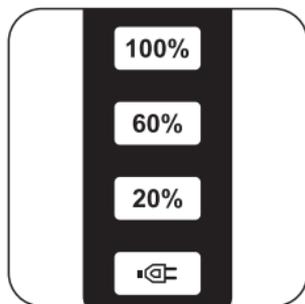

### • Indicator instruction when charging

1. Connect the adapter and start to charge after confirming power off.
2. The battery is 1%-5% charged when the  is blinking.
3. The battery is 5%-20% charged when the  is on without blinking and the  starts blinking.
4. The battery is 20%-60% charged when the  &  are on without blinking and the  starts blinking.
5. The battery is 60%-100% charged when the  starts blinking and other indicator lights are on without blinking.
6. When the four indicator lights are all on without blinking, it indicates the clipper is fully charged.

### • Indicator instruction when using

1. 100%-60% discharging stage, all indicator lights are on without blinking.
2. 60%-20% discharging stage when the  is off and other indicator lights are on without blinking.
3. 20%-5% discharging stage when the  &  are off and other indicator lights are on without blinking.
4. 5%-1% discharging stage when the  starts blinking, and other indicator lights are off. please charge the clipper.

## PROTECTION FUNCTION



When fully charged, clipper will automatically cut off power. the charging protection function starts to work to prevent damage from overcharging.

When the clipper runs out of power, the charging protection function is automatically activated to protect the battery for long term use.


## BLADE ADJUSTMENT FUNCTION

1.To adjust upward, push the adjustment button directly to the required position.

2.To adjust downward, press the lock key button down and then push the adjustment button to the required position.

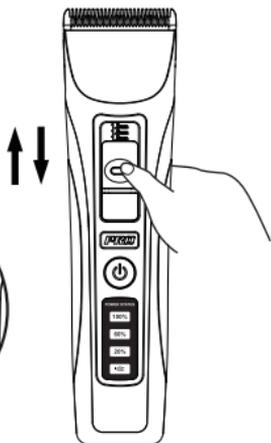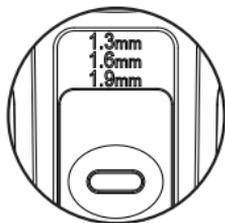

## LOADING & UNLOADING COMB

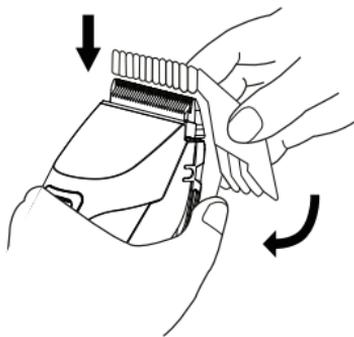

### • Loading Comb


Hold both sides, match the slot and push up (avoid losing or dropping).

### • Unloading Comb

Push away the locked part of the comb on both sides.

(do not press the front or back part to not damage the comb)


## CLEANING

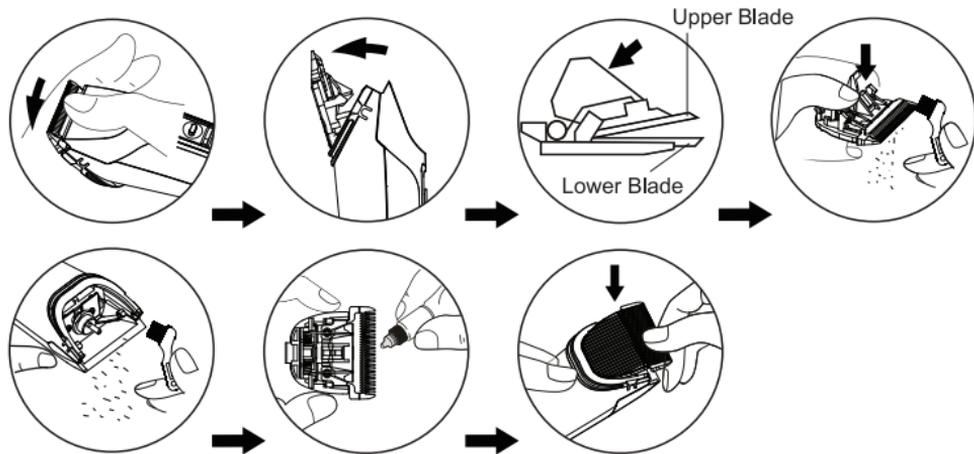

1. Before unloading the blade, make sure you have shut it down and separated the power line and the clipper.
2. Wash off the hair between the upper blade and the lower blade.  
(please do not take apart the spring of the blade in case it breaks down)
3. Clean the hair in the clipper by brush.
4. After cleaning the blade, add some lubricant between the upper blade and the lower blade. Otherwise, the cutting edge will go dull, make weird noise, give out heat, and lower the performance.
5. Replace the blade (there must be a click sound if you match it right).

## LOADING BLADE

1. Confirm the position of the blade have been adjusted to the 1.9mm.
2. Loading the blade on the clipper.




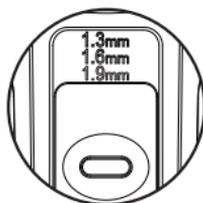


1.9mm Position



Loading Blade

## CAUTIONS

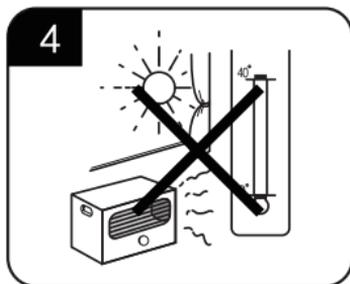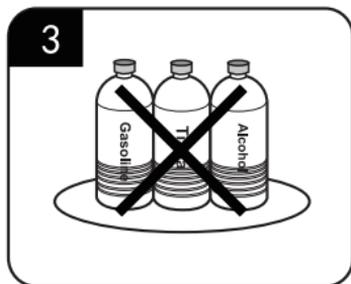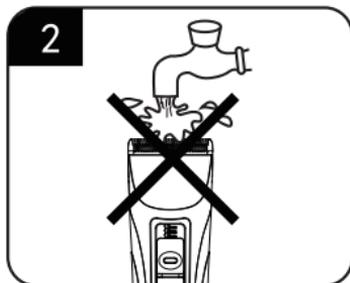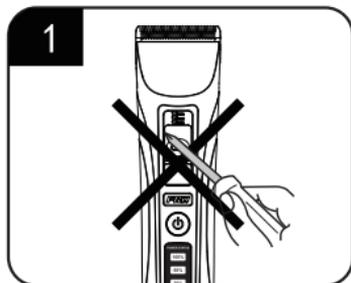

1. Do not tear down the chipper at random.
2. Do not clean product by water flush, and keep the unit away from damp situation.
3. Do not use any corrosives such as alcohol, gasoline etc. to clean the surface.
4. Avoid being charged above 40°C or below 0°C.

\*If the product is not used for a long time, please charge it once at least every three months.

### Disposal of Battery

The inside is rechargeable battery. Please take the battery out before discarding it and dispose the battery in an environment-friendly way.

# WARRANTY CARD

PURCHASE DATE	TERM OF SERVICE

GUEST	ADD.		NAME	
			TEL.	
POS	ADD.		NAME	
	NAME		TEL.	

## PRODUCT PROVIDE THE FOLLOWING WARRANTY

1. Production under the strict quality management and check.
2. Problems during the normal using, one-year warranty is offered by presenting the WARRANTY CARD.  
(blade is consumable, paid to provide)
3. Some paid service are following:
  - a) problems caused by improper use;
  - b) problems caused by improper fix or modification;
  - c) problems caused by natural disaster;
  - d) problems or damages caused by hitting or dropping after purchase;
  - e) problems caused by power fault;
  - f) problems caused by not obeying the rules;
4. Please present the WARRANTY CARD for maintenance.

# Quality Moving the World



Shenzhen Patpet Technology Co.,Ltd

 <https://patpet.com/>

 Become a dealer: [inquiry@patpet.com](mailto:inquiry@patpet.com)

 After-service: [support@patpet.com](mailto:support@patpet.com)

 [@PatpetDogCollar](#)

 Youtube Video Guide

Made in China

