




Quick Start

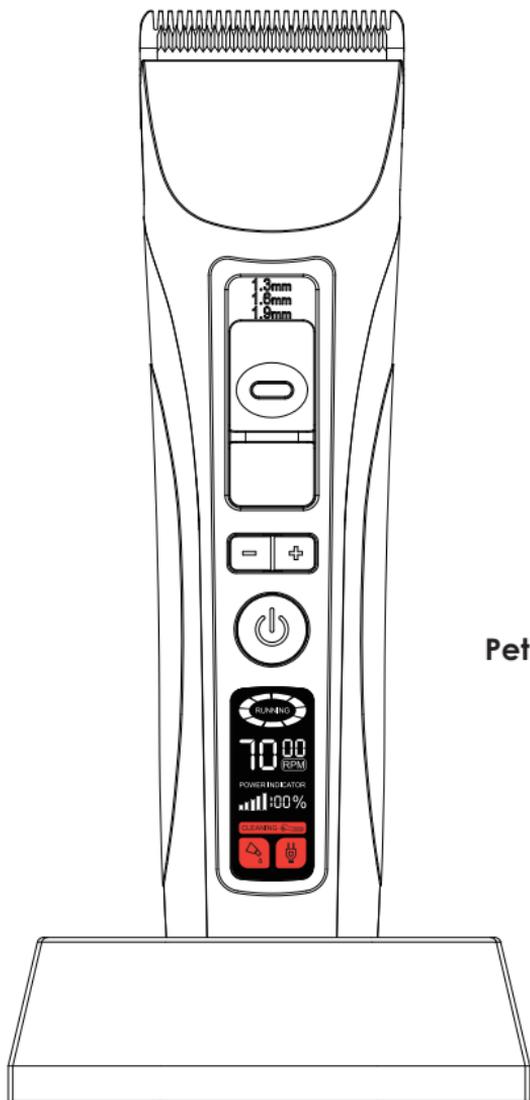


Pet Grooming Clipper:950

User Manual

Before using please read the manual carefully and keep it properly for reference

Product Diagram

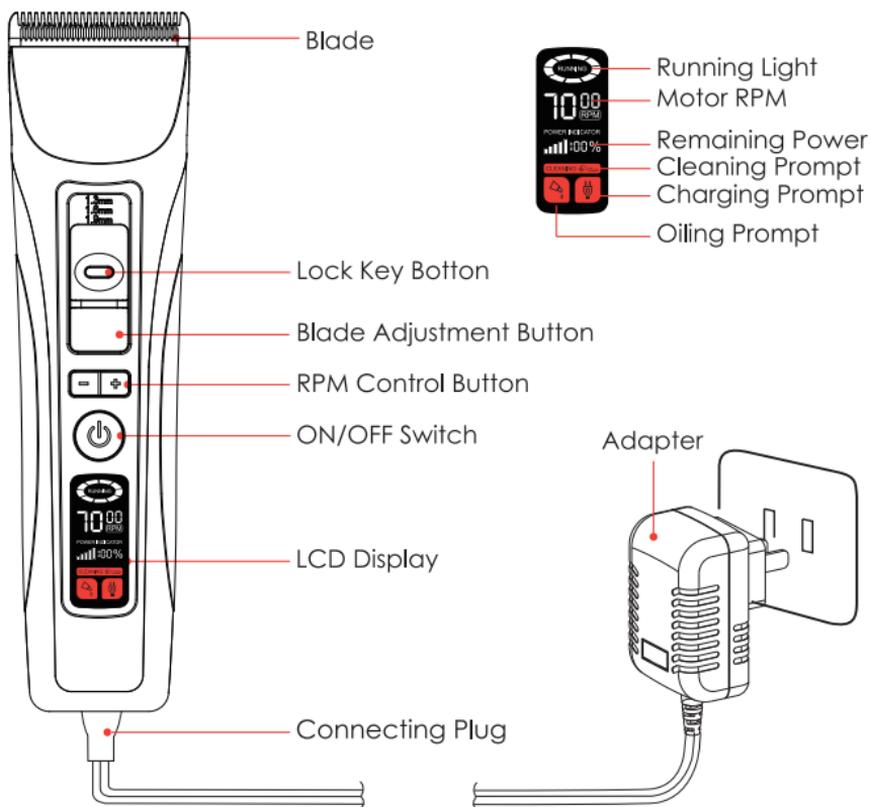

Package Contents



3mm Comb



6mm Comb



9mm Comb



12mm Comb



Adapter



Cleaning Brush



Oil Bottle



Charge Stand

Product Specification


Motor	Powerful & Quiet Silver Palladium Alloy Motor
Blade	Ceramic Upper Blade & Stainless Steel Lower Blade
Adapter	Input:AC100-240V 50/60Hz Output:DC 5V 1000mA
Battery Type	Rechargeable Li-ion battery(2200mA)
Charging Time	3 Hours
Using Time	240 Minutes

Charging Method

- 1.Put the connecting plug into the slot of charge stand.
- 2.Put the adapter plug into the socket.
- 3.Push the clipper into charge stand after confirming power off.
- 4.The charge prompt icon lights up while charging.

※The clipper can be directly connected to the adapter to charge.

※The clipper can be directly connected to the adapter to use when no power.

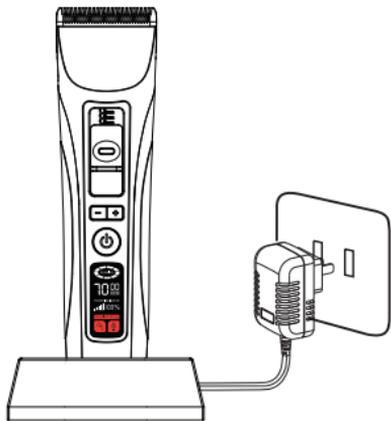

Charging Instruction

1. The best charging temperature: 5°C~40°C
2. The battery will reach its best condition after being fully charged for 3~4 times.
3. It's normal phenomenon for the clipper to give out some heat while using and charging.
4. Please use the original adapter to charge.

LCD Function Description



• RPM Control Function

Real-time display the running speed of product.
RPM setting method: press “-” or “+” to set RPM.
RPM setting range: 5000~7000.

• Intelligent Constant RPM Control Function

The product can maintain a constant speed to running.
The product can automatically compensate for the decline in the speed of cutting resistance.



• Running Light

In the starting state, the running light starts to run clockwise, the higher speed, the faster cycle.



• Battery Power Real-Time Display

Real-time display the power of the Li-ion rechargeable battery.



• Cleaning Prompt Function

When the load is too large, the cleaning icon will start to blinking to remind you should unload the blade to clean and oiling.



• Oiling Prompt Function

When the load is too large or the product has accumulated 60 minutes of running, the oiling icon will blinking to reminding you should oiling the blade.

※If keeping alarm after cleaning and oiling, the blade has been worn, please replace the new blade to use.

LCD Function Description



- **Charging Prompt Function**


When the battery power is less than 5%, the charging icon starts to blinking to remind you should charging the product.

※ After starting, if you do not have any key operation within two minutes, the screen will close to save electricity.


Blade Adjustment Function

1. To adjust upward, push the adjustment button directly to the required position.

2. To adjust downward, press the lock key button down and then push the adjustment button to the required position.

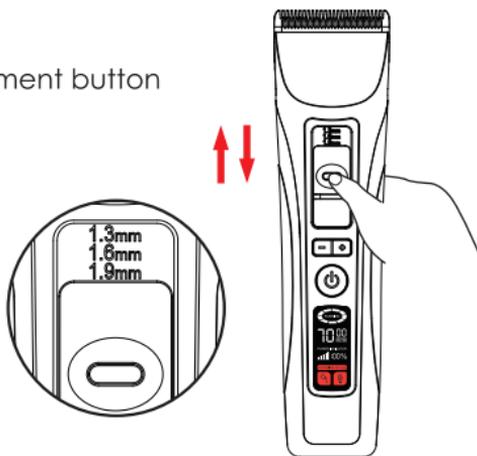

Loading & Unloading Comb

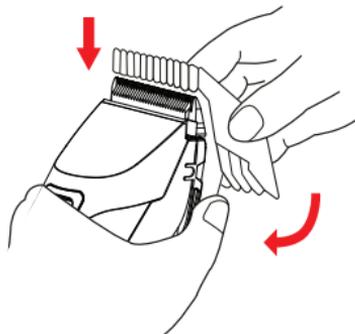


- **Loading Comb**

Hold both sides, match the slot and push up. (avoid losing or dropping)

- **Unloading Comb**

Push away the locked part of the comb on both sides. (do not press the front or back part to not damage the comb)

Cleaning

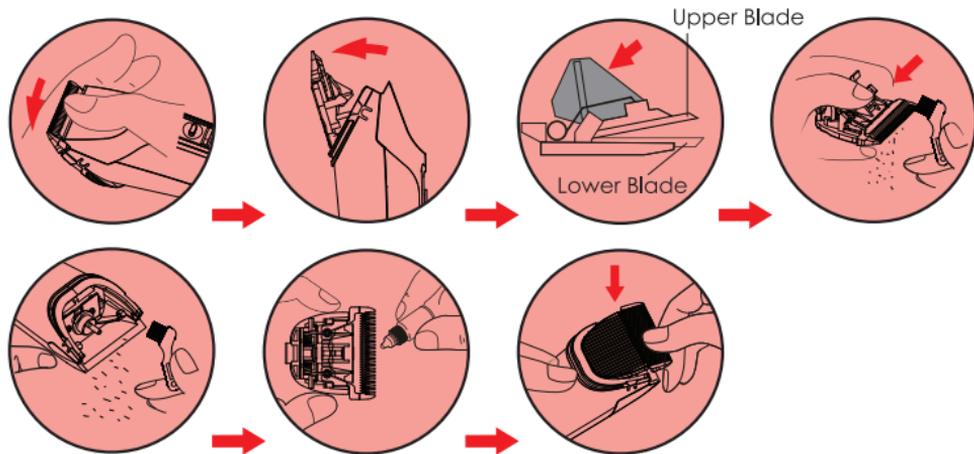

1. Before unloading the blade, make sure you have shut it down and separated the power line and the clipper.
 2. Wash off the hair between the upper blade and the lower blade.
(please do not take apart the spring of the blade in case it breaks down)
 3. Clean the hair in the clipper by brush.
 4. After cleaning the blade, add some lubricant between the upper blade and the lower blade. Otherwise, the cutting edge will go dull, make weird noise, give out heat, and lower the performance.
 5. Replace the blade (there must be a click sound if you match it right).
- ※If the blade fell apart by accident during cleaning, please contact us to install it.

Loading Blade

1. Confirm the position of the blade have been adjusted to the 1.9mm.
2. Loading the blade on the clipper.





1.9mm Position



Loading Blade

Cautions

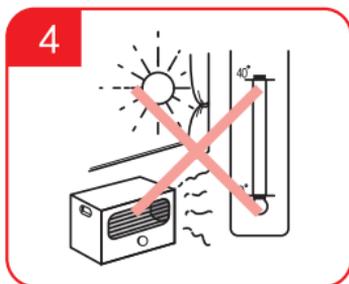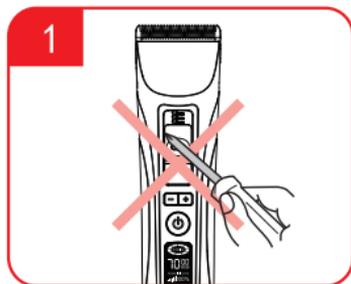

1. Do not tear down the chipper at random.
2. Do not clean product by water flush, and keep the unit away from damp situation.
3. Do not use any corrosives such as alcohol, gasoline etc. to clean the surface.
4. Avoid being charged above 40°C or below 0°C.

※If the product is not used for a long time, please charge it once at least every three months.

Disposal of Battery

The inside is rechargeable battery. Please take the battery out before discarding it and dispose the battery in an environment-friendly way.

WARRANTY CARD

PURCHASE DATE	TERM OF SERVICE

GUEST	ADD.		NAME	
			TEL.	
POS	ADD.		NAME	
	NAME		TEL.	

PRODUCT PROVIDE THE FOLLOWING WARRANTY

1. Production under the strict quality management and check.
2. Problems during the normal using, one-year warranty is offered by presenting the WARRANTY CARD.
(blade is consumable, paid to provide)
3. Some paid service are following:
 - a) problems caused by improper use;
 - b) problems caused by improper fix or modification;
 - c) problems caused by natural disaster;
 - d) problems or damages caused by hitting or dropping after purchase;
 - e) problems caused by power fault;
 - f) problems caused by not obeying the rules;
4. Please present the WARRANTY CARD for maintenance.

Quality Moving the World



Shenzhen Patpet Technology Co.,Ltd

 <https://patpet.com/>

 Become a dealer: inquiry@patpet.com

 After-service: support@patpet.com

 [@PatpetDogCollar](#)

 Youtube Video Guide

Made in China

